

FUEL MASTER USER INSTRUCTION STEPS

1

INSERT PROKEE, WAIT FOR DISPLAY TO CHANGE, THEN REMOVE PROKEE.
FUEL MASTER ACCCOUNTING SYSTEM
INSERT KEY, HOLD 1 SECOND TO BEGIN



2

ENTER ODOMETER/CHRONOMETER READING,
(WHOLE NUMBERS ONLY, NO TENTHS, THEN
PRESS "ENTER".



3

RE-INSERT PROKEE, AND HOLD UNTIL DISPLAY
CHANGES



4

REMOVE PROKEE, SELECT HOSE FROM THOSE
SHOWN, THEN PRESS "ENTER"



5

DISPENSER IS NOW ACTIVATED
TO DISPENSE FUEL
TURN ON PUMP HANDLE TO DISPENSE
RETURN HOSE AFTER USE

