


# American Kestrel Nest Box Plan

Art Gingert  
PO Box 185  
West Cornwall CT 06796

Spring 2011

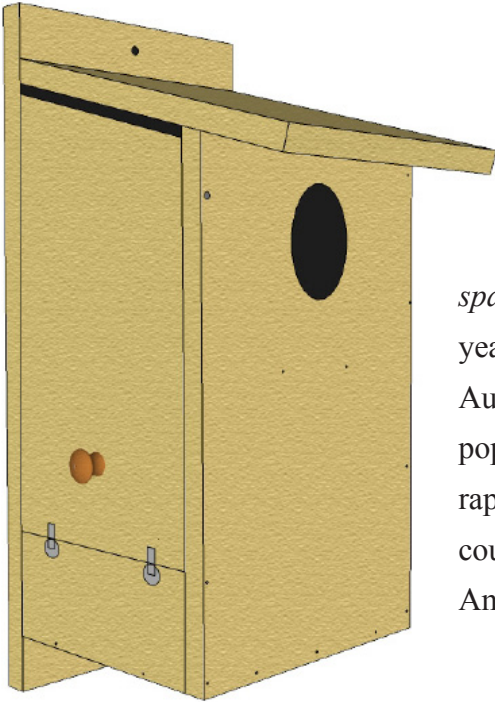


These plans for the construction of an American Kestrel (*Falco sparverius*) nest box are based on experience gained during more than thirty years of field work in northwest and north-central Connecticut (National Audubon Society and individually) with a now successful, well-established population of kestrels. It is hoped that the information will be used by raptor enthusiasts elsewhere who are interested in the welfare of this open country falcon whose numbers continue to decline in several regions of North America.

## Notes on Design

- The **side-opening design** of the nest box -- with fixed Side Stop -- serves a number of practical purposes. The box is much safer to monitor than if it were top-opening; wood shavings, eggs and nestlings are secure; and adult birds and nestlings are easier to capture for banding and research work.
- The **floor size** for this nest box design provides almost 93 square inches, which is close to 50% larger than the 8"x 8" floors recommended in the majority of American Kestrel nest box designs available in the literature or online. Having observed breeding kestrels using wood duck boxes in drained beaver swamps years ago, I realized that more living space was significantly advantageous for broods of five or six nestlings which spend up to a month in the nest boxes.
- Though a 3" diameter entrance hole is standard on many plans, a **3"x 4" vertical oval hole** provides more room for older nestlings looking outwards from the inside Perch, and may also offer a place for adult male pair-bonding display early in the breeding season.


Further notes regarding *Nest Box Sites and Mounting* (choosing good American Kestrel breeding habitat, selecting ideal box locations, and safely erecting a kestrel box) are available. Good luck with your own efforts in assisting these beautiful raptors, and I welcome inquiries regarding wildlife management work with American Kestrels.

# American Kestrel Nest Box Plan

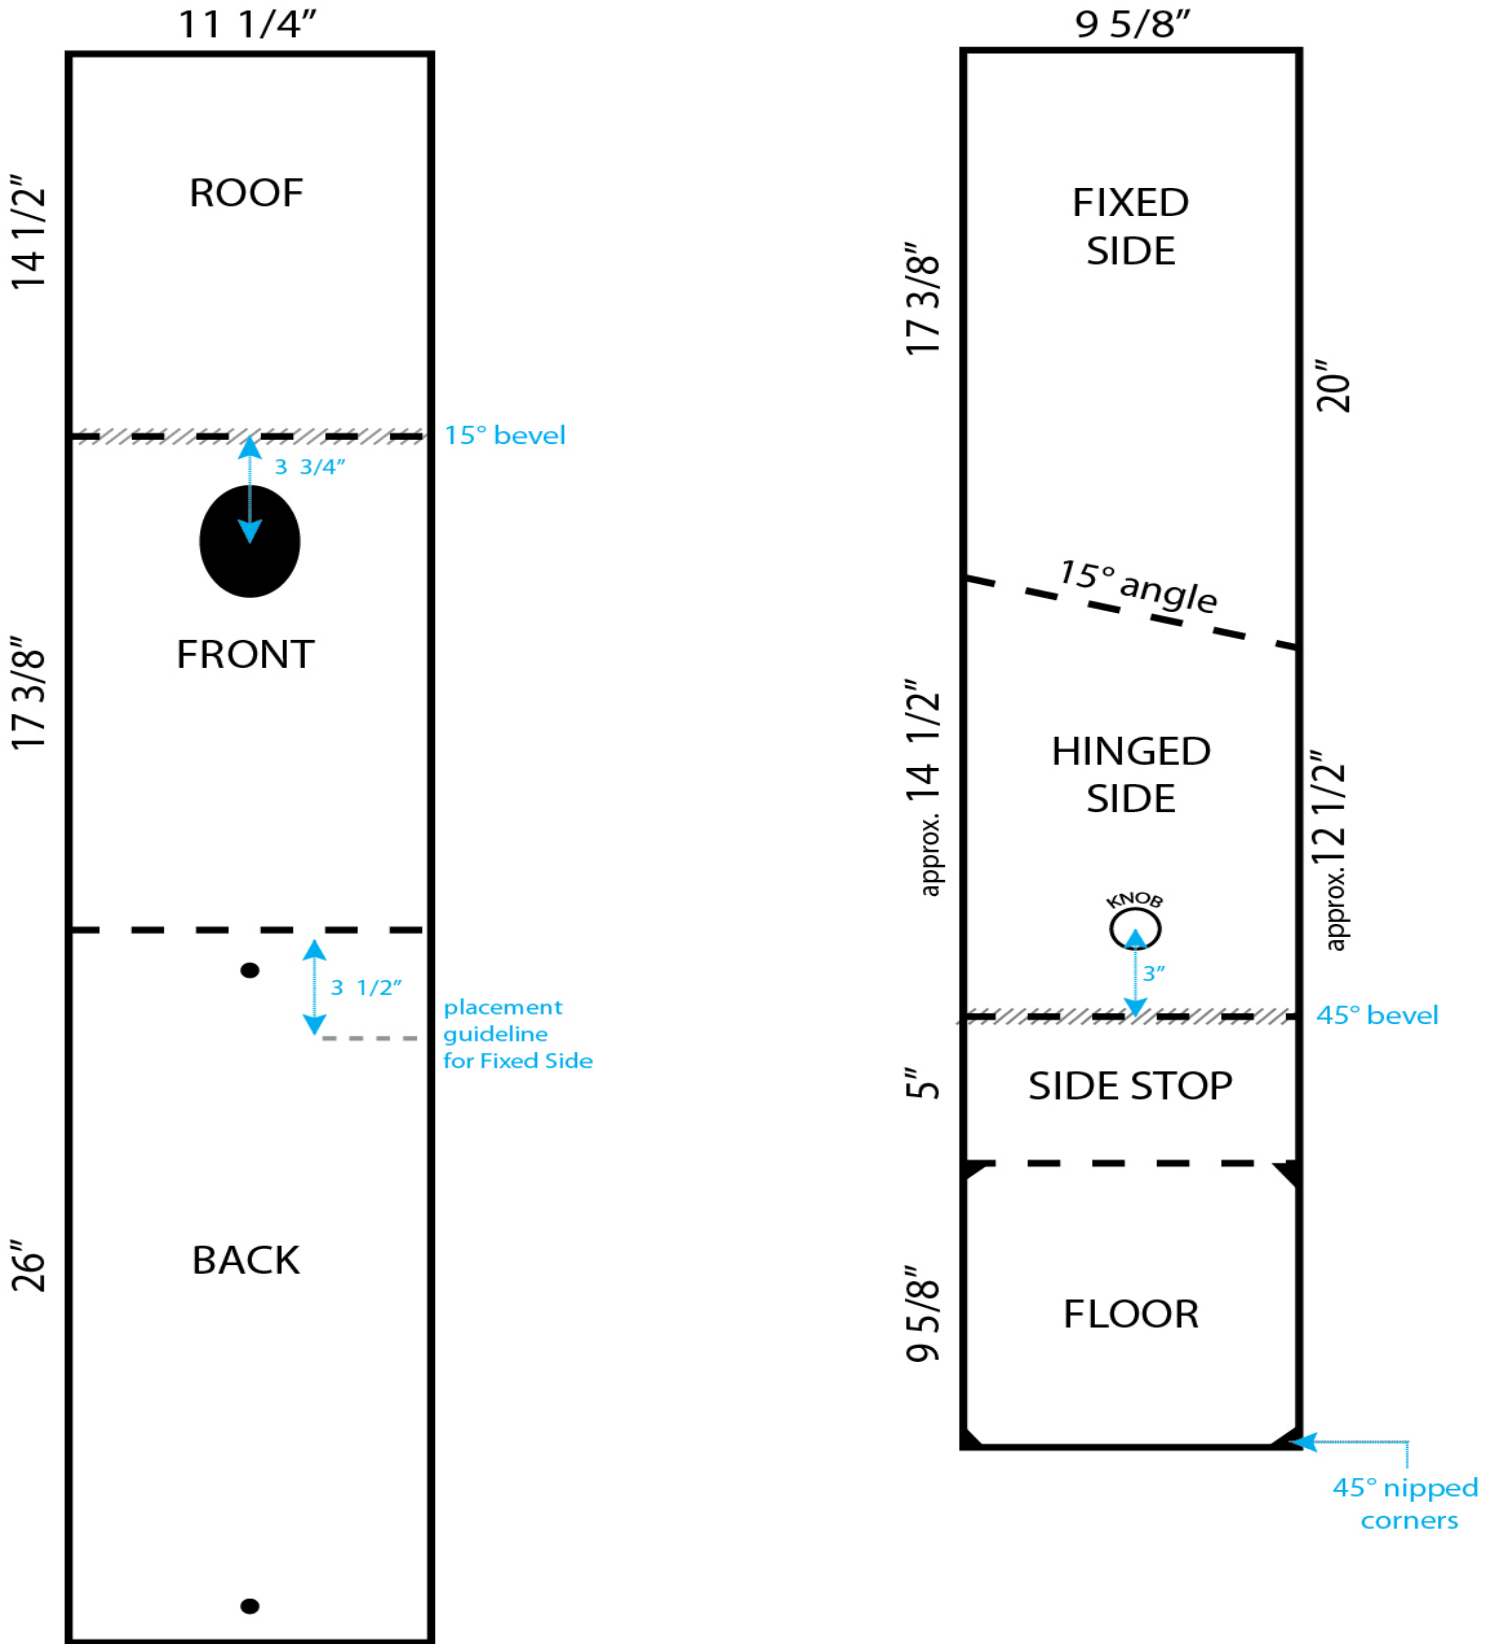

free to distribute with credit to author

**Art Gingert**  
**PO Box 185**  
**West Cornwall CT 06796**

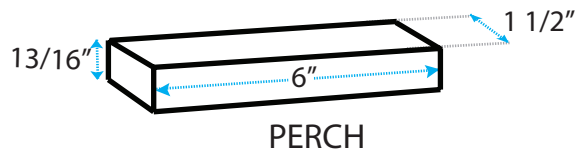

## Notes on Materials

- A great choice for lumber is Type EWP, 1x12 “rough one side” white pine, which is not only easy to work with, lightweight and quite aesthetic, but also inexpensive. It is most often found in a thickness of 13/16”. Approximately 10’ of 1x12 EWP lumber is needed per box, allowing for minimal waste and avoidance of knots, cracks, etc. 2011 prices are \$1.44 per lineal foot. Cedar is also a good choice, but pricier, and oak, though durable, is heavier than needed. Avoid using 1” rough-cut sawmill pine, which is much harder to work with and creates a heavy, unwieldy nest box which can be unsafe to deal with while up in a tree.
- For fasteners, GRK screws (2” x #8 \*\*Trimhead type) are superb; strong, easy to use with a cordless drill, look good, and most importantly, they will not split the lumber near the ends of pieces (which may happen with standard GRKs, decking screws or nails). Approximately 35 screws per box.
- The use of a light bead of high quality PL Premium construction adhesive on all joined edges guarantees a strong, weatherproof nest box with tight joints.
- Do not paint or otherwise treat with a wood preservative. The EWP pine will weather to a warm gray color naturally and last in all weathers and seasons for several decades, if well constructed.
- Approximate cost for lumber & hardware materials is \$ 20.00 per nest box, @ 2011 prices.

### Assembly Sequence:

1. Attach Back to Fixed Side, then secure Floor to Back & Fixed Side.
2. Attach Front (with oval entrance hole & inside Perch) to Fixed Side & Floor.
3. Attach Roof to Fixed Side, Front and Back.
4. Cut 45° bevel across Hinged Side, check fit, and secure Side Stop to Back, Front and Floor.
5. Finally, attach Hinged Side using hinge nails.



©Art Gingert/Wildlands Photography

## Construction Notes

- Quality carpentry in construction is important for many reasons -- for durability, appearance, weather “tightness” and ultimately the safety of the bird species which may use the box.
- A radial arm saw is quite useful for cutting out nest box pieces, especially for the bevel and angle cuts, and for incidental trimming. Use a table saw to trim some 1x12 stock to 9 5/8” as needed (see Plans).
- If a number of boxes are needed, it is helpful to make a “jig” with support rails to assist in securing the Back of the box to the Fixed Side, which is the first step in construction. Drawing a short guideline 3 1/2” down from the top of the Back is helpful for positioning these two pieces, which ensures adequate space (2 1/2”) at the top and bottom of the Back for the lag screws used when mounting the box.
- The Floor piece is inset upwards 1/8” in order to keep rainwater from seeping into the joints. Be sure to test the fit of this piece against the two sides, for both width and depth, since it may need to be trimmed slightly. Nip off 3/8” square from each corner before securing the Floor. This ensures that however the box is mounted, any rainwater entering the box will find its way out at the lowest corner & drainage hole.
- A pattern can be made for the 3” x 4” oval entrance hole from wood, cardboard, or plastic. A jigsaw can be used to cut out the oval, and 80 grit sandpaper wrapped around a 1” diameter dowel works well as a tool for smoothing the raw edges.
- A small Perch piece is very useful, secured horizontally inside the box, centered 2” below the base of the entrance hole. A bead of construction adhesive on the Perch helps it stay in place while the Front is turned over and the Perch screwed in place from the outside (using 2 screws, approximately 8” down from the roof, and 4” in from each side of box).
- When securing the Front, carefully align it with the Fixed Side. Trim bottom edge of Front if necessary.
- Cut the 45° bevel across the Hinged Side, with the cut edge of the upper part overlapping the lower part (shingle-like). Check for good fit with both pieces, leaving a 3/8” space below the top edge of the Front to allow for “hinging” & ventilation. If the Hinged Side is tight and needs trimming along one of its vertical edges, use a pencil with one’s hand inside the entrance hole to mark it. One can also trim the lower edge of the Side Stop if needed. Secure the smaller Side Stop piece.
- The “hinge nails” for the Hinged Side are placed exactly in line with each other – use a combination square to mark the locations. Start with a mark for the nail on the Front, 2” down from the top. Use a thin wood shim to hold the Hinged Side exactly in place, and a thin drill bit to make pilot holes for two 8 penny galvanized common nails before hammering them home in turn.
- The Roof is best secured by working from the back of the box. Apply a thick bead of construction adhesive to the beveled edge of the Roof and use some force to squeeze the Roof tightly against the Back, creating a totally weatherproof seal which is quite durable in the field. A high quality caulk (like clear Lexel) could also be used with this step. Start by securing Roof to Fixed Side. Make sure to put several screws through the Back and into the rear edge of the Roof piece.

- A 1 ¼” wooden Cabinet Knob provides a strong “pull” to open the Hinged Side and adds a nice touch. Apply some construction adhesive to the knob before securing it with its screw, 3” up from the bevel cut. Alternately, drill out the Knob and use a stainless steel bolt and compression nut on the inside of the box. A ¼” x 2” galvanized eye bolt (with flat washer, lock washer, and nut) could also serve here.
- To fasten the Hinged Side securely, one can use two 1 ¼” galvanized WeatherGard Half-Turn Buttons (Stanley Tool Co. makes them) at the top of the Side Stop, each placed 2” in from the edges of the box.
- Mark locations for two, 5/16” box mounting holes at the top and bottom of the Back piece – centered, and 1 1/2” in from the edges – and drill them. It is suggested that two 5/16” x 3 ½” galvanized lag screws and washers be used for mounting (use shorter lags for utility poles or barn sides).
- A single 8 penny galvanized common nail (use thin pilot hole) can be driven into the lower edge of the Back piece, near the base of the Fixed Side. Leaving only ½” of the nailhead showing provides a very useful place to hang a small bucket (or stuff sack filled with wood shavings) when visiting the nest box for monitoring purposes.
- Using EWP pine lumber and GRK Trimhead screws, the completed nest box will weigh 12 to 13 lbs.
- The name or identifying logo of a sponsoring organization can be applied to the Fixed Side of the box if desired.